



**MEEK MANUFACTURING COMPANY**  
 PO Box 11200  
 Fort Smith, Arkansas 72917-1200  
 800-643-2533 – Fax 479-646-6231  
 www.meekmirrors.com


**Installation  
 Instructions**

SMALL CONVEX SURVEILLANCE MIRROR	DATE 01/2018	MODEL M1900	SHEET NO. 7-00
-------------------------------------	-----------------	----------------	-------------------


## Installation Instructions

### FOR 12” and 18” DIAMETER MIRRORS

1. Attach offset bracket (B-2) firmly to the wall with screws or lag bolts.
2. Attach Mirror to bracket, and adjust angle. Tighten screws on ball bracket to fix mirror in desired position.
3. The mirror is now ready for use.

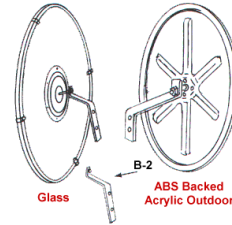


### FOR 26”, 30” AND 36” DIAMETER MIRRORS

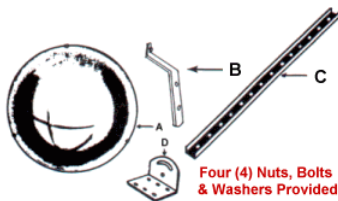

Shown below are various ways large mirrors can be installed using the provided hardware shown here.


### FOR SUSPENSION FROM CEILING, OR COUNTER TOP USE:

1. Attach Base plate “D” to ceiling or counter top.
2. Attach channel “C” to base plate “D”.
3. Attach offset bracket “B” to channel “C”.
4. Attach mirror “A” to offset bracket “B” and adjust for height.
5. Tighten screws on ball bracket to fix mirror in desired position.

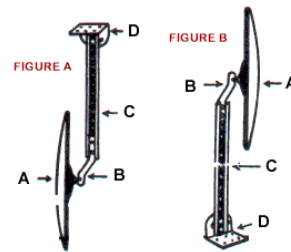

### FOR EXTENDED WALL USE:

1. Cut end of Channel "C", bend to right angle.
2. Attach to base plate "D"
3. Attach mirror "A" directly to channel "C". Discard offset bracket "B".
4. Tighten screws on ball bracket to fix mirror in desired position.

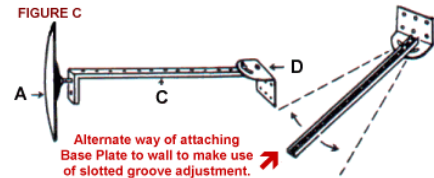

### FOR CLOSE WALL USE:

1. Attach offset bracket “B” to wall or post.
2. Attach mirror “A” to offset bracket “B” and adjust angle.
3. Tighten screws on ball bracket to fix mirror in desired position.
4. Discard channel “C” and base plate “D”.

